



**GENERAL MAINTENANCE:**

Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Use clean cloths to remove dirt, dust, oil, grease, etc.

**WARNING:**

When servicing your pressure washer, use only identical replacement parts. Use of any other parts could create a hazard or cause product damage.

**WARNING:**

Always wear eye protection with side shields marked to comply with ANSI Z87.1. Failure to do so could result in objects being thrown into your eyes resulting possibly in serious injury.

**WARNING:**

Before inspecting, cleaning or servicing the machine, shut off motor, wait for all moving parts to stop, disconnect unit from power supply, and pull trigger to release water pressure. Failure to follow these instructions can result in serious personal injury or property damage.

**WARNING:**

Do not at any time let brake fluids, gasoline, petroleum-based products, penetrating lubricants, etc., come in contact with plastic parts. Chemicals can damage, weaken or destroy plastic which could result in serious personal injury.

**NOTICE:**

Always refer to your Manufacturer's Operator's manual for specific instructions regarding your electric powered pressure washer.

## NOZZLE MAINTENANCE

Excessive pump pressure (a pulsing sensation felt while squeezing the trigger) may be the result of a clogged or dirty nozzle.

- Unplug the pressure washer.
- Turn off the pressure washer and shut off the water supply. Pull trigger to release water pressure.
- Remove the nozzle from the spray wand.

**NOTE:** Never point the spray wand at your face.

- Using a straightened paper clip or nozzle cleaning tool, free any foreign materials clogging or restricting the nozzle.
- Using a garden hose, flush debris out of nozzle by back flushing (running the water through the nozzle backwards or from the outside to the inside).
- Reconnect the nozzle to the spray wand.
- Turn on the water supply.

## STORING THE PRESSURE WASHER

- Store in a dry, covered area where the weather cannot damage it.
- It is important to store this product in a frost-free area. Always empty water from all hoses, the pump, and the detergent bucket before storing.
- Make sure the on/off switch is in the OFF position.
- Disconnect the water connection.
- Tilt the unit as shown to allow any remaining water in the pump to drain from the water inlet.
- Coil the hose and place in the storage area. Do not allow the hose to become kinked.
- Store the unit and accessories in an area that does not reach freezing temperatures. Do not store near furnace or other sources of heat that could dry out the pump seals.

### NOTICE:

- *The use of a pump protector is strongly encouraged after each use and to prevent cold weather damage during storage over the winter months.*

## PREPARING FOR USE AFTER STORAGE

- Consult your operator's manual for the proper procedure to prepare your unit for use after storage.